



Read this document carefully before using this device. The guarantee will be expired by device damages if you don't attend to the directions in the user manual. Also we don't accept any compensations for personal injury, material damage or capital disadvantages.

ENDA EDT3011 COOLING / DEFROST CONTROLLER

Thank you for choosing ENDA EDT3011 series cooling / defrost controller devices.

- ▶ 77 x 35mm sized
- ▶ Single NTC prob input
- ▶ Additional offset feature for input
- ▶ Defrosting duration and interval time settings
- ▶ Delay time and minimum operating time settings for compressor protection
- ▶ Compressor or door alarm control via digital input
- ▶ Upper, lower and delay time settings for alarm
- ▶ In case of probe failure, output status can be set to ON, OFF or periodic
- ▶ Upper and Lower setpoint value limits can be adjusted
- ▶ Temperature unit can be selected as °C or °F
- ▶ CE marked according to European Norms



RoHS Compliant



Order Code : EDT3011 - - -

1- Supply Voltage

230.....230V AC
024.....24V AC/DC
012.....12V AC/DC
SM.....9-30VDC/7-24VAC

2- Output Selection

08.....8A Relay output
20.....20A Relay output




3- ModBus

Blank.....N/A
RS.....ModBus
(Specify at Order)

CONNECTION DIAGRAM



ENDA EDT3011 is intended for installation in control panels. Make sure that the device is used only for intended purpose. The electrical connections must be carried out by a qualified staff and must be according to the relevant locally applicable regulations. During an installation, all of the cables that are connected to the device must be free of electrical power. The device must be protected against inadmissible humidity, vibrations, severe soiling and make sure that the operation temperature is not exceeded. The cables should not be close to the power cables or components.

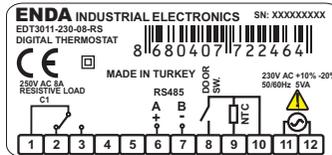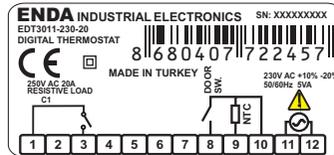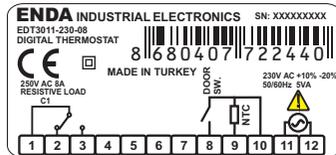

Equipment is protected throughout by DOUBLE INSULATION.

Holding screw 0.4-0.5Nm

NOTE: SUPPLY:



Note:

- 1) Mains supply cords shall meet the requirements of IEC 60227 or IEC 60245.
- 2) In accordance with the safety regulations, the power supply switch shall bring the identification of the relevant instrument and it should be easily accessible by the operator.



SİSEL MÜHENDİSLİK ELEKTRONİK SAN. VE TİC. A.Ş.
Serifali Mah. Barbaros Cad. No:18 Y.Dudullu 34775
ÜMRANİYE/İSTANBUL-TURKEY
Tel : +90 216 499 46 64 Pbx. Fax : +90 216 365 74 01
url : www.enda.com.tr



EDT3011-EN-02-191202

| INPUT | | | |
|----------------------|-------------|------------------|---|
| Input Type | Scale Range | Accuracy | |
| NTC Resistive Sensor | EN 60751 | -60.0...150.0 °C | -76.0...302.0°F ± 1% (Full scale) ± 1 digit |

| ENVIRONMENTAL CONDITIONS | |
|-------------------------------|--|
| Ambient / Storage Temperature | 0 ... +50°C/-25 ... +70°C (with no icing) |
| Relative Humidity | 80% Relative humidity for temperatures up to 31°C, decreasing linearly to 50% at 40°C. |
| Protection Class | According to EN 60529 ; Front Panel : IP65, Rear Panel : IP20 |
| Height | Max.2000m |

KEEP AWAY device from exposed to corrosive, volatile and flammable gases or liquids and DO NOT USE the device in similar hazardous locations.

| ELECTRICAL CHARACTERISTICS | |
|----------------------------|---|
| Supply | 230V AC +10% -20%, 50/60Hz or 12/24V AC/DC ±10% or 9-30V DC / 7-24V AC SMPS |
| Power Consumption | Max. 3VA |
| Wiring | Power connection : 2.5mm² screw-terminal, Signal connection : 1,5mm² screw-terminal connections |
| Line Resistance | Max. 100ohm |
| Data Protection | EEPROM (Min. 10 years) |
| Time Accuracy | ±1% - 1sec. |
| EMC | EN 61326-1: 2013 (Performance criteria B has been satisfied for EN 61000-4-3 standard) |
| Safety Requirements | EN 61010-1: 2010 (Pollution degree 2, overvoltage category II) |
| Scale | 3.5 digit, 7-segment 19mm red LED |

| OUTPUT | |
|-----------|---|
| C1 Output | For 8A : NO and NC 250V AC, 8A (resistive load), Control output. For 20A : NO 250V AC, 20A (resistive load), Control output. |

| | |
|---------------------------|--|
| Life expectancy for relay | For 8A : Mechanical 30.000.000; Electrical 300.000 operation. 250V AC, 8A (resistive load). For 20A : Mechanical 30.000.000; Electrical 100.000 operation. 250V AC, 20A (resistive load). |
|---------------------------|--|

| CONTROL | |
|---------------|--------------------------------------|
| Control type | Single set-point and alarm control |
| A/D converter | 12-bit accuracy, 100ms sampling time |
| Hysteresis | Adjustable between 0.1 and 15.0 °C/F |

| HOUSING | |
|--------------------|--|
| Housing Type | Suitable for flush-panel mounting according to DIN 43 700. |
| Dimensions | W77xH35xD61mm |
| Weight | Approx. 215g (after packing) |
| Enclosure Material | Self extinguishing plastics |

Avoid any liquid contact when the device is switched on. DO NOT clean the device with solvent (thinner, gasoline, acid etc.) and / or abrasive cleaning agents.

DIMENSIONS

For removing device from panel :
- Push the flush-mounting clamps in direction **2** as shown in the figure. Then, pull out the clamp in direction **3**


For mounting device ;
Push the device in direction **1**

Note :
1) Panel thickness should be maximum 7mm.
2) If there is no 60mm free space at the back side of the device, it would be difficult to remove it from the panel.

Panel Cut-out 71,5mm
29mm
Covers

Programming Diagram

Running Mode

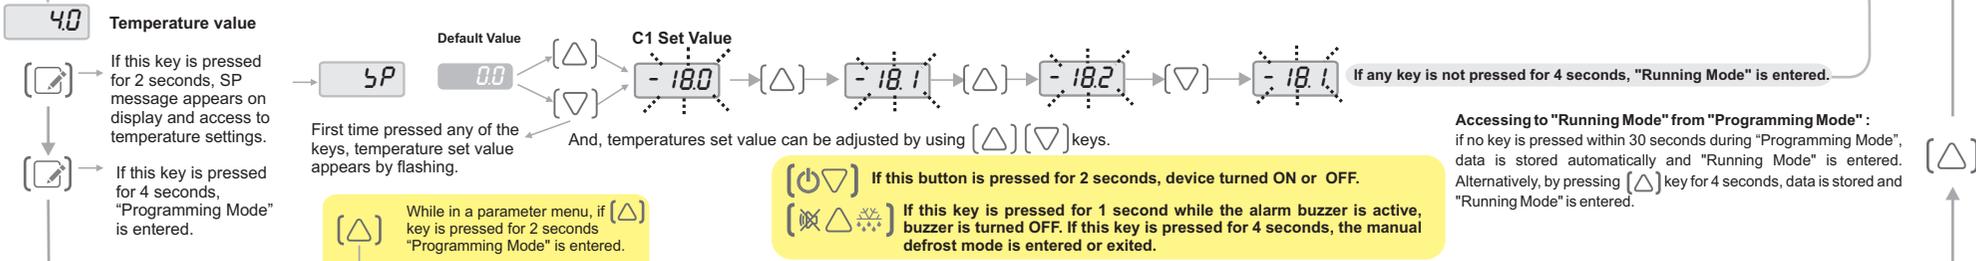

Programming Mode

| GENERAL SETTINGS | TEMPERATURE SETTINGS | COMPRESSOR SETTINGS | DEFROST SETTINGS | ALARM SETTINGS | SECURITY SETTINGS |
|--|---|---|---|---|---|
| <p>Probe Calibration Can be adjusted between -25.0 and 25.0</p> <p>Decimal Notation 0 = Without decimal 00 = With decimal</p> <p>Temperature Unit °C = Celsius °F = Fahrenheit</p> <p>Indicator Selection During "Running Mode" t.d = Indicates cabin temperature. 5Pd = Indicates SP value</p> <p>Digital Input Relay State n.o = Will be activated when switch position is closed. n.c = Will be activated when switch position is opened.</p> <p>Digital Input Behavior 0 = No act. 1 = External alarm is active. At the end of 17 time, iR flashes on the screen until the external alarm is OFF. 2 = External alarm is active. At the end of the 17 time, the compressor is stopped until the external alarm is turned off and iR flashes on the display. 3 = Door is open. Compressor is stopped until the door closes and i.d flashes on the screen when 17 time is up.</p> <p>Digital Input Delay Time Can be adjusted between 0 and 120 minutes.</p> | <p>Operating Temperature Hysteresis. It can be adjusted between 0.1 and 15.0.</p> <p>Minimum Temperature Can be adjusted between -60.0 and r2</p> <p>Maximum Temperature Can be adjusted between r1 and 150.0.</p> | <p>Compressor Power-up Delay Time Can be adjusted between 0 and 199 minutes.</p> <p>Required Minimum Stop Duration for Compressor Can be adjusted between 0 and 199.</p> <p>Required Minimum Running Duration for Compressor Can be adjusted between 0 and 199.</p> <p>Compressor Stop Time In Case of Probe Failure. Can be adjusted between 0 and 199.</p> <p>Compressor Running Time In Case of Probe Failure. Can be adjusted between 0 and 199.</p> | <p>Defrosting Interval. It can be adjusted between 0 and 199 hours. If 0 is selected, defrost is never performed. See dB parameter.</p> <p>Defrost Running Time It can be adjusted between 0 and 199 hours. If 0 is selected, defrost is never performed.</p> <p>Defrost Time Performed at Power-up dno = Defrost not performed at power-up dYE = Defrost performed at power-up</p> <p>Defrost Power-up Start Delay Time Can be adjusted between 0 and 199 minutes. Will be valid if; d4 = dYE</p> <p>Indicator Value Selection During Defrost. 0 = Cabin temperature is displayed. 1 = Displayed if the cabin temperature is below 5P+r0, otherwise 5P+r0 is displayed. When the defrost ends, the display value does not change until the cabin temperature falls below 5P+r0.</p> <p>Defrosting interval Type Selection. 0 = Defrosting timer (d0) counts during the device is running. 1 = Defrosting timer (d0) counts during the compressor is running.</p> | <p>Low Temperature Alarm Set Value. Can be adjusted between -60.0 and 150.0°C. Hysteresis value is 2°C/4°F.</p> <p>Low Temperature Alarm Type Selection. no = No alarm rEL = Dependent on SP value. Ab5 = Independent alarm.</p> <p>High Temperature Alarm Set Value. Can be adjusted between -60.0 and 150.0°C. Hysteresis value is 2°C/4°F.</p> <p>High Temperature Alarm Type Selection. no = No alarm rEL = Dependent on SP value. Ab5 = Independent alarm.</p> <p>High Temperature Alarm Delay Time After Power-up. Can be adjusted between 0 and 240 minutes.</p> <p>Temperature Alarm Delay Time. Can be Adjusted between 0 and 240 minutes.</p> <p>High Temperature Alarm Delay Time After Defrost. Can be adjusted between 0 and 240 minutes.</p> | <p>Menu Security Level non = Menu invisible. PYE = Can be modified. PnP = Read only.</p> <p>Menu Security Level non = Menu invisible. PYE = Can be modified. PnP = Read only.</p> <p>Menu Security Level non = Menu invisible. PYE = Can be modified. PnP = Read only.</p> <p>Menu Security Level non = Menu invisible. PYE = Can be modified. PnP = Read only.</p> <p>Menu Security Level non = Menu invisible. PYE = Can be modified. PnP = Read only.</p> <p>Menu Security Level non = Menu invisible. PYE = Can be modified. PnP = Read only.</p> |

SETTING UP THE PARAMETERS

If [key] key is pressed, the current value of the parameter appears by flashing on the display.

[▽] [Δ] By using "UP" or "DOWN" navigation keys, selected parameter can be adjusted to the desired value.

[key] After the setting up the parameters, if set key is pressed again, adjusted parameter name appears on display.

During a parameter adjustment, if one of the [▽] or [Δ] navigation key is pressed continuously for 0.6 seconds, adjusted value to be changed increases or decreases rapidly.

If it continues to press for longer than 0.6 seconds, hundreded digits will increase or decrease rapidly. If the key released and wait for a second, then process returns to the units digit.

CAUTION!
During defrost process, alarms will not be activated.
If the door is open, the high temperature alarm will not be active.

ERROR MESSAGES

| | | | | | |
|-----|--|-----|--------------------------|-----|----------------|
| PFR | Sensor Broken (Cannot Communicate with the Sensor) | P5C | NTC Sensor Short Circuit | iR | External Alarm |
| --- | Measured Temperature Above the Scale | RH | High Temperature Alarm | i.d | Door Open |
| --- | Measured Temperature Below the Scale | RL | High Temperature Alarm | | |

Programming From the Device to ENDAKEY-RF

If the [key] pressed for 4 seconds, device switch to "Programming Mode". If you keep pressing the key for 6 seconds, then the message *Hrd* appears on display and device is moved to the reading position from the ENDAKEY. In this case the device waits for the parameters to be read from ENDAKEY. In this case, ENDAKEY should touching the upper left the corner of device and pressing the button on the ENDAKEY. Parameters reading is performed with ENDAKEY the PYE is shown before return to the operating mode. If reading is not performed, the device waits for 1 minute and returns to the "Running Mode".

Programming With ENDAKEY-RF

If the button on the ENDAKEY is pressed and ENDAKEY will transfer the parameters to the device then the PYE message is shown. And the device switches to the "Running Mode".



Move ENDAKEY-RF towards the top left of the device in direction 1



ENDA EDT3011 COOLING / DEFROST CONTROLLER

MODBUS PROTOCOL ADDRESS MAP

1.1 Holding Registers

| Parameter Number | Holding Register Address Decimal (Hex) | Data Type | Data Content | Read / Write Permission | Default Value | | |
|---------------------------|---|---------------|---------------|---|--|-------|----|
| Configuration Parameters | H0 | 0000d (0000h) | Word | SP : Temperature setpoint value. | R / W | 0 | |
| | H1 | 0001d (0001h) | Word | O1 : Offset value for temperature sensor (Can be set between -25.0 and 25.0). | | 0 | |
| | H2 | 0002d (0002h) | | P1 : Decimal point (place) selection (0 = No Decimal point added , 1 = Enable). | R / W | 1 | |
| | H3 | 0003d (0003h) | Word | P2 : °C / °F unit selection (0 = °C, 1 = °F). | R / W | 0 | |
| | H4 | 0004d (0004h) | Word | P5 : Display parameter selection in Running Mode. (0 = Current temperature of the cabinet , 1 = SP temperature value). | R / W | 0 | |
| | H5 | 0005d (0005h) | Word | I1 : Relay state selection for digital input. (0 = N.O. , 1 = N.C.) | R / W | 0 | |
| | H6 | 0006d (0006h) | Word | I5 : Action selection for digital input. 0 = No action, 1 = External alarm active. (When the I7 time is over, <i>!R</i> message flashes until the input activation is removed.) 2 = External alarm active. (When the I7 time is over, <i>!R</i> message flashes until the input activation is removed and the compressor will shut OFF.) 3 = Door open. (Compressor output is OFF until the door is closed. And <i>!d</i> message flashes until at the end of the I7 duration.) | R / W | 3 | |
| | H7 | 0007d (0007h) | Word | I7 : Digital input delay time duration (Can be set between 0 and 120minutes). Digital input activation will be delayed according to the set time duration. | R / W | 30 | |
| | H8 | 0008d (0008h) | Word | Ad : ModBus address | R / W | 1 | |
| Main Regulator Parameters | H9 | 0009d (0009h) | Word | br : Modbus baud rate : 0 = Disable, 1 = 2400 bps, 2 = 4800 bps, 3 = 9600 bps, 4 = 19200 bps, 5 = 38400 bps, 6 = 57600 bps | R / W | 3 | |
| | H10 | 0010d (000Ah) | Word | R0 : Temperature setpoint hysteresis (Can be set between 0.1 and 15.0 °C or °F). | R / W | 20 | |
| | H11 | 0011d (000Bh) | Word | R1 : Minimum setpoint value (Can be set between -50.0°C and R2 (H12) parameter value). | R / W | -50.0 | |
| | H12 | 0012d (000Ch) | Word | R2 : Maximum setpoint value (Can be set between R1 (H11) parameter value and 150.0°C). | R / W | 150.0 | |
| | Compressor Parameters | H13 | 0013d (000Dh) | Word | C0 : Compressor delay time duration on power-up (Can be set between 0 and 199 minutes). | R / W | 0 |
| | | H14 | 0014d (000Eh) | Word | C2 : Minimum stop time duration for compressor (Can be set between 0 and 199 minutes). | R / W | 3 |
| | | H15 | 0015d (000Fh) | Word | C3 : Minimum operating time duration for compressor (Can be set between 0 and 199 seconds). | R / W | 0 |
| | | H16 | 0016d (0010h) | Word | C4 : Stop time duration for the compressor on probe failure (Can be set between 0 and 199 minutes). | R / W | 10 |
| | | H17 | 0017d (0011h) | Word | C5 : Operating time duration for the compressor on probe failure (Can be set between 0 and 199 minutes). | R / W | 10 |
| Defrost Parameters | H18 | 0018d (0012h) | Word | D0 : Interval time duration for the defrosting process (Can be set between 0 and 99 hours. 0 = No Defrosting). | R / W | 8 | |
| | H19 | 0019d (0013h) | Word | D3 : Defrosting time duration (Can be set between 1 and 99 minutes). | R / W | 30 | |
| | H20 | 0020d (0014h) | Word | D4 : Defrosting process behaviour on power-up (0 = No Defrosting, 1 = Yes) | R / W | 0 | |
| | H21 | 0021d (0015h) | Word | D5 : Defrosting delay time duration on power-up (If D4 is set to 1, feature will be enabled. Can be set between 0 and 199 minutes). | R / W | 0 | |
| | H22 | 0022d (0016h) | Word | D6 : Temperature displaying selection during defrosting (0 = Yes, 1 = Will be displayed if the temperature value below setpoint value, if not, temperature setpoint value (SP) will be displayed). | R / W | 1 | |
| Alarm Parameters | H23 | 0023d (0017h) | Word | D8 : Defrost interval time procedure (If set to 0, D0 counts the time with the power-up. If set to 1, D0 counts the time when the compressor starts). | R / W | 0 | |
| | H24 | 0024d (0018h) | Word | A1 : Lower temperature alarm setpoint value (Can be set between -50.0 and 150.0°C). | R / W | 10.0 | |
| | H25 | 0025d (0019h) | Word | A2 : Lower temperature alarm type selection (0 = No Alarm, 1 = Relative Alarm (SP -A1) , 2 = Independent Alarm). | R / W | 1 | |
| | H26 | 0026d (001Ah) | Word | A4 : Upper temperature alarm setpoint value (Can be set between -50.0 and 150.0°C). | R / W | 10.0 | |
| | H27 | 0027d (001Bh) | Word | A5 : Upper temperature alarm type selection (0 = No Alarm, 1 = Relative Alarm (SP +A4) , 2 = Independent Alarm). | R / W | 1 | |
| Security Parameters | H28 | 0028d (001Ch) | Word | A6 : Alarm start delay time duration on power-up (Can be set between 0 and 199 minutes). | R / W | 120 | |
| | H29 | 0029d (001Dh) | Word | A7 : Temperature alarm delay time duration (Can be set between 0 and 199 minutes). | R / W | 15 | |
| | H30 | 0030d (001Eh) | Word | A8 : Alarm delay time duration after the defrosting process (Can be set between 0 and 199 minutes). | R / W | 15 | |
| | H31 | 0031d (001Fh) | Word | -Cn (Configuration) menu security level. Can be set between 0 and 2. 0 = Menu Invisible, 1 = Menu parameters can be modified, 2 = Menu parameters are read only. | R / W | 1 | |
| | H32 | 0032d (0020h) | Word | -rE (Regulator) menu security parameter (can be set like H31 parameter). | R / W | 1 | |
| | H33 | 0033d (0021h) | Word | -CP (Compressor) menu security parameter (can be set like H31 parameter). | R / W | 1 | |
| | H34 | 0034d (0022h) | Word | -dE (Defrost) menu security parameter (can be set like H31 parameter). | R / W | 1 | |
| | H35 | 0035d (0023h) | Word | -AL (Alarm) menu security parameter (can be set like H31 parameter). | R / W | 1 | |
| | H36 | 0036d (0024h) | Word | SP (H0) parameter security level. Can be set between 1 and 2. 1 = Menu parameters can be modified, 2 = Menu parameters are read only. | R / W | 1 | |

1.2 Function Parameter Memory Map

| | | | | | |
|------|---------------|------|---|-------|---|
| H800 | 0800d (0320h) | Word | Function control parameter. When the following codes are written to this parameter, corresponding operation is performed : (23040d 5A00h) = No action. (23041d 5A01h) = Returns to default (All parameters are returned to the default value). (23042d 5A02h) = Manual defrost starts or stops. (23043d 5A03h) = The device is turned ON or OFF. (23044d 5A04h) = The buzzer is switched off. (23045d 5A05h) = Device restarts. | R / W | 0 |
|------|---------------|------|---|-------|---|

ENDA EDT3011 COOLING / DEFROST CONTROLLER

MODBUS PROTOCOL ADDRESS MAP

1.3 Input Registers

| Parameter Number | Input Register Address Decimal (Hex) | Data Type | Parameter Description | Read / Write Permission |
|------------------|--------------------------------------|-----------|---------------------------------------|-------------------------|
| I0 | 0000d (0000h) | Word | Measured temperature value (Decimal). | R |

1.4 Discrete Inputs

| Parameter Number | Discrete Input Address | Data Type | Parameter Description | Read / Write Permission |
|------------------|---|-----------|---|-------------------------|
| D0 | (0000)h | Bit | Compressor active/inactive indicator (0 = Inactive , 1 = Active (Standing by for compressor output). | R |
| D1 | (0001)h | Bit | Compressor output indicator (0 = OFF ,1 = ON). | R |
| D2 | (0002)h | Bit | Low temperature alarm active/inactive indicator (0 = Inactive, 1 = Active (Standing by for Alarm output). | R |
| D3 | (0003)h | Bit | High temperature alarm active/inactive indicator (0 = Inactive, 1 = Active (Standing by for Alarm output). | R |
| D4 | 0004d (0004h) | Bit | Low temperature alarm output indicator (0 = OFF, 1 = ON). | R |
| D5 | 0005d (0005h) | Bit | High temperature alarm output indicator (0 = OFF, 1 = ON). | R |
| D6 | 0006d (0006h) | Bit | Defrost output indicator (0 = OFF ,1 = ON). | R |
| D7 | 0007d (0007h) | Bit | ON/OFF status indicator (0 = OFF, 1 = ON). | R |
| D8 | 0008d (0008h) | Bit | Digital input status indicator (0 = Input inactive, 1 = Input active). | R |
| D9-D15 | 0012d (000Ch) 0015d (000Fh) | Bit | Reserved | R |

1.5 Memory Map for Software Revision Input Registers

| Software Revision | Address (Hex) | Data Type | Parameter Description | Read / Write Permission |
|-------------------|---------------|-----------|---|-------------------------|
| Software Revision | 0920d (0398h) | 14 Word | Software name and update is read in ASCII format and as 14 word. For example : EM4400-01 28 Feb 2015. Memory Formats : Word Word Word Word Word Word Word Word Word Word Word Word Word 1 2 3 4 5 6 7 8 9 10 11 12 13 14 ME440001-1 82Feb 210.5 NOTE : To view each word correctly by changing the byte sequences should be displayed as ASCII TEXT | R |

MODBUS ERROR MESSAGES

Modbus protocol has two types error, communication error and operating error. Reason of the communication error is data corruption in transmission. Parity and CRC control should be done to prevent communication error. Receiver side checks parity and CRC of the data. If they are wrong, the message will be ignored. If format of the data is true but function doesn't perform for any reason, operating error occurs. Slave realizes error and sends error message. Most significant bit of function is changed '1' to indicate error in error message by slave. Error code is sent in data section. Master realizes error type via this message.

ModBus Error Codes

| Error Code | Name | Meaning |
|------------|----------------------|--|
| {01} | ILLEGAL FUNCTION | The function code received in the query is not an allowable action for the slave. If a Poll Program Complete command was issued, this code indicates that no program function preceded it. |
| {02} | ILLEGAL DATA ADDRESS | The data address received in the query is not an allowable address for the slave. |
| {03} | ILLEGAL DATA VALUE | A value contained in the query data field is not an allowable value for the slave. |

Message Sample ;

| Structure of command message (Byte Format) | | | Structure of response message (Byte Format) | | |
|--|-------|-------|---|----------|-------|
| Device Address | (0A)h | | Device Address | (0A)h | |
| Function Code | (01)h | | Function Code | (81)h | |
| Beginning address of coils. | MSB | (04)h | Error Code | (02)h | |
| | LSB | (A1)h | | CRC DATA | LSB |
| Number of coils (N) | MSB | (00)h | MSB | | (53)h |
| | LSB | (01)h | | | |
| CRC DATA | LSB | (AC)h | | | |
| | MSB | (63)h | | | |

Komut mesajında görüldüğü gibi (4A1)h = 1185 nolu Coil'in bilgisi istenmiş ancak 1185 adresli herhangi bir coil olmadığı için (02) nolu hata kodu (Geçersiz Veri Adresi) gönderilmiştir.

* MODBUS CONNECTION DIAGRAM

