



Please read this document carefully before using this product. The guarantee will be invalidated if the device is damaged by not following instructions detailed in the manual. The company shall not be responsible for any damage or losses however caused, which may be experienced as a result of the installation or use of this product.

## ENDA EDT2411A DIGITAL THERMOSTAT

Thank you for choosing ENDA EDT2411A temperature controller.

- ▶ 35x77mm.
- ▶ On-Off control.
- ▶ Relay output for cooling or heating control.
- ▶ Single NTC probe input.
- ▶ Offset value can be entered for NTC input.
- ▶ Compressor protection parameters can be entered.
- ▶ In case of probe failure, output status can be set to ON, OFF or periodic.
- ▶ Upper and Lower setpoint value limits can be adjusted.
- ▶ Selectable "Smart Defrost" feature.
- ▶ Defrosting duration and intervals can be adjusted.
- ▶ 6 Different warning tone selections.
- ▶ Lower and upper alarm limit can be adjusted to depending on set value.
- ▶ Temperature unit can be selected °C or °F.
- ▶ Digital input ;
  - External alarm
  - Initiate defrost
- ▶ Transfer device parameter settings with ENDAKEY
  - No power-up required.
- ▶ RS485 ModBus protocol communication feature (optional).
- ▶ CE marked according to European Norms.



Order Code : EDT2411A - 

1	2	3

- 1 - Supply Voltage**
- 230.....230V AC
  - 110.....110V AC
  - 24.....24V AC/DC
  - 12.....12V AC/DC
  - SM.....10-30VDC / 8-24V AC
  - 24V.....12V / 24V DC

- 2-Output**
- R.....08A Relay output
  - P.....20A Relay output



- 3 - Modbus**
- RS..... RS-485 Modbus Available (Optional / Specify at order)
  - Blank.... N/A

**CE** **RoHS**  
**Compliant**

### CONNECTION DIAGRAM




ENDA EDT2411A is intended for installation in control panels. Make sure that the device is used only for intended purpose. The electrical connections must be carried out by a qualified staff and must be according to the relevant locally applicable regulations. During an installation, all of the cables that are connected to the device must be free of electrical power. The device must be protected against inadmissible humidity, vibrations, severe soiling and make sure that the operation temperature is not exceeded. The cables should not be close to the power cables or components.

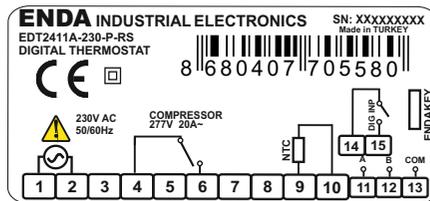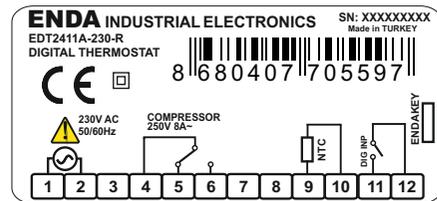

Equipment is protected throughout by DOUBLE INSULATION.

Holding screw 0.4-0.5Nm

#### NOTE:



#### Note:

- 1) Mains supply cords shall meet the requirements of IEC 60227 or IEC 60245.
- 2) In accordance with the safety regulations, the power supply switch shall bring the identification of the relevant instrument and it should be easily accessible by the operator.

ENVIRONMENTAL CONDITIONS	
Ambient / Storage Temperature	0 ... +50°C/-40 ... 85°C (without icing)
Relative Humidity	Max. humidity 80% for temperatures up to 31°C decreasing linearly to 50% relative humidity at 40°C.
Protection Class	According to EN60529; Front panel : IP65, Rear panel : IP20
Height	Max. 2000m

**Do not use the device in locations subject to corrosive and flammable gasses.**

ELECTRICAL CHARACTERISTICS	
Supply Voltage	230V AC 110V AC +%10 -%20, 50/60Hz; 12V AC/DC ± %10 or 24V AC/DC ± %10 or 10-30V DC / 8-24V AC ± 10% SMPS
Power Consumption	Max. 5VA
Connection	2.5mm <sup>2</sup> screw-terminal connections
Scale	-60.0 ... +150.0°C (-76.0 ... +302.0°F)
Sensitivity	0.1°C (Can be selected as 0.1°C or 1°C.)
Accuracy	±1°C
Time Accuracy	±1%
Display	4 digits, 12.5mm, 7 segment LED (V2 Code : Blue Display)
EMC	EN 61326-1: 2013
Safety Requirements	EN 61010-1: 2010 (Pollution degree 2, overvoltage category II)


OUTPUTS	
Relay Output	For EDT2411A-X-R ; Relay : NO+NC 250V AC,8A (resistive load), 1/2HP, 0.37KW 240V AC (inductive load) For EDT2411A-X-P ; Relay : NO 277V AC,20A (resistive load), 1/2HP, 0.37KW 250V AC (inductive load)
Life Expectancy for Relay	For EDT2411A-X-R ; Without load 30.000.000 mechanical; 250V AC, 8A resistive load 100.000 electrical operation. For EDT2411A-X-P ; Without load 10.000.000 switching; 277V AC,20A (for resistive load) 100.000 electrical operation.

CONTROL	
Control Type	Single set-point control
Control Algorithm	On-Off control
Hysteresis	Adjustable between 1 ... 20.0°C.

HOUSING	
Housing Type	Suitable for flush -panel mounting
Dimensions	W77xH35xD61mm
Weight	Approx. 190g (After packing)
Enclosure Material	Self extinguishing plastics.

**While cleaning the device, solvents (thinner, benzene, acid etc.) or corrosive materials must not be used.**

### DIMENSIONS

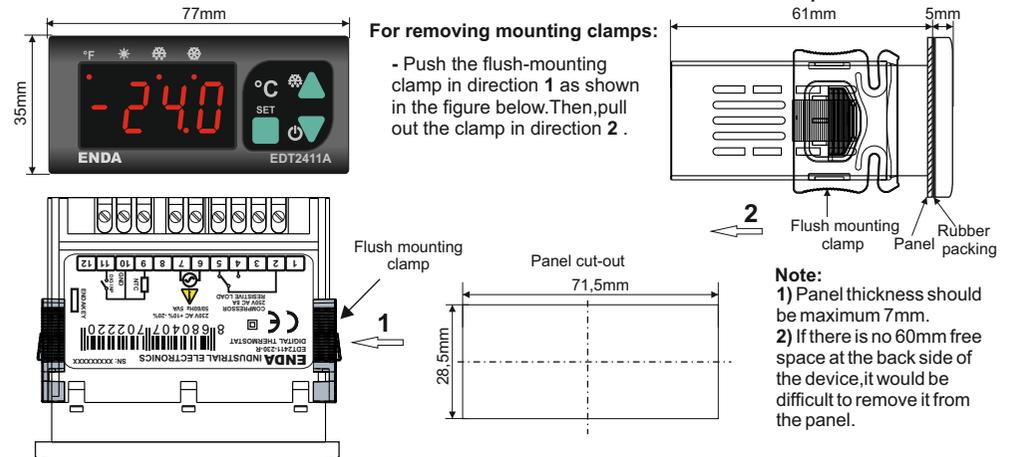


For removing mounting clamps:

- Push the flush-mounting clamp in direction 1 as shown in the figure below. Then, pull out the clamp in direction 2.

**Note:**

- 1) Panel thickness should be maximum 7mm.
- 2) If there is no 60mm free space at the back side of the device, it would be difficult to remove it from the panel.

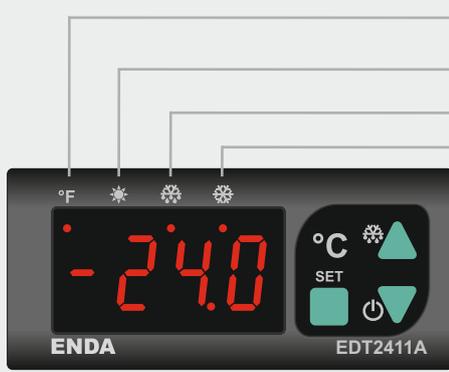


- °F **FAHRENHEIT LED** : In parameter value or the measured temperature value "°F" unit while this LED lights up. In the hidden menu at the same time the user menu parameter is shown the LED lights up.
- ☀ **HEATING LED** : Heating is being checked; while the output is active, the LED lights.
- ❄ **DEFROST LED** : With the defrost lights up.
- ❄ **COMPRESSOR LED** : If compressor output is active, this LED lights up. While these compressor delays expected, this LED flashes.
- SET** In "Running Mode", indicates the set value.  
In "Programming Mode", indicates the selected parameter value.
- ▲ While in "Programming Mode", provides the transition to the next parameter. If parameter is being adjusted, it increases parameter's value. Constantly holding this key, the parameter value rapidly increases.
- ▼ While in "Programming Mode", provides the transition to the previous parameter. If parameter is being adjusted, it decreases parameter's value. Constantly holding this key, the parameter value rapidly decreases.

## FRONT PANEL COMMANDS

### 1. Viewing and Changing The Set Value




### 2. Locking and Unlocking Keys



### 3. Manuel Defrost Process

While in the "Running Mode", if **▲** key is pressed for 2 seconds, defrost process starts manually. If **ddur** parameter is **0**, manual defrost will be inactive.


### 4. Activating / Inactivating The Control Outputs

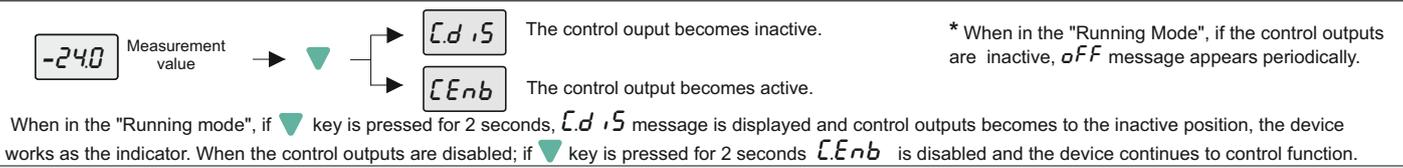

### 5. Changing Parameter Values

If **▲** keys are pressed together for 2 seconds **LP17** is displayed and "User Menu" is entered, then first parameter's name is displayed in the user menu.

While a parameter is selected, by pressing **SET** key, parameter value can be displayed. This parameter can be changed with **▼▲** keys. If no operation performed for 3 seconds or during this time, **SET** key is pressed while parameter value displayed, parameter name will be displayed again. While parameter name displayed, if by pressing together **▼▲** keys, "Running Mode" is entered.

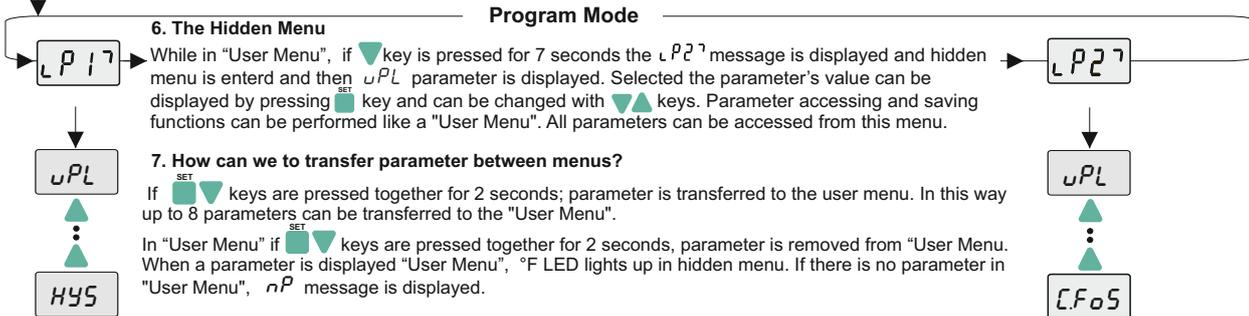

## ERROR MESSAGES

<b>PFA</b>	Means, thermostat probe is broken.	<b>PSC</b>	Means, thermostat probe is short circuit.
<b>---</b>	Temperature value is higher than the scale.	<b>---</b>	Temperature value is lower than the scale.


## ALARM SITUATION

<b>WW</b> <b>-24.0</b> <b>AAA</b>	1. Measurements shown flashes when the alarm condition occurs and if <b>Snd</b> parameter is not <b>0</b> , audible warning is heard. While warning, by pressing <b>▲</b> key, audible warning can be temporarily disabled.
<b>WW</b> <b>EA</b> <b>AAA</b>	2. External alarm is active but the outputs are unaffected.
<b>WW</b> <b>SA</b> <b>AAA</b>	3. External alarm is active and in this state, specifies that the relay outputs are turned off (off state). While warning, by pressing any key, audible warning can be temporarily disabled.

## FACTORY SETTINGS

If **▼** key is held down while the device is powered up, **dPAr** message appears and factory parameters restored.

## ENDAKEY PARAMETER TRANSFER

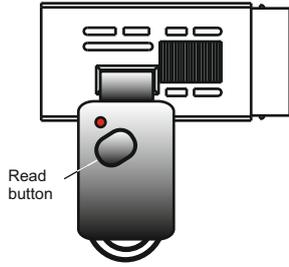

### TRANSFERRING THE PARAMETERS FROM ENDAKEY TO DEVICE

While in "Running Mode", if key on device or "Read" button on "ENDAKEY" is pressed, "dL" message appears on display and parameters are read and transferred to the device. If the parameter transfer is successful, the "rEF" message appears and the device begins to work with the loaded parameter values. If the parameters are wrong, incorrect or "ENDAKEY" is faulty, "Errr" message appears. Parameters will not be changed on device.

### TRANSFERRING THE PARAMETERS FROM DEVICE TO ENDAKEY

While in "Running Mode", if key is pressed on device, "uL" message appears on display and parameters are read and transferred to the device. If process success, "Suc" message appears. In case of failure, "Err" message appears. Parameters will not be changed on device.

**NOTE 1** : No power-up required for transferring the parameter by using "ENDAKEY". For long battery life, "ENDAKEY" must be disconnected from device after the transferring process.

**NOTE 2** : Please specify at order "ENDAKEY" if required.

### CONTROL PARAMETERS

		Min.	Max.	UNIT	DEFAULT VALUE
$uPL$	Upper limit for setpoint	-600	$uPL$	°C	150
$LoL$	Lower limit for setpoint	$LoL$	1500	°C	-60
$HYS$	Differential cooling (hysteresis)	0.1	200	°C	2
$oFF$	Offset value for cooling	-200	200	°C	0

### CONFIGURATION PARAMETERS

$CLYP$	Control type selection ( $HE = (*)$ heating control is selected, $Co =$ Cooling control is selected.) $CLYP$ parameter as $HE$ is selected, the defrost function of the device is disabled.	$Co$	$HE$		$Co$
$Unit$	Temperature unit	$oC$	$oF$		$oC$
$dPnt$	Decimal point ( $no =$ decimal point isn't shown $22.2^{\circ}C$ , $YES =$ decimal point is shown $22.3^{\circ}C$ .)	$no$	$YES$		$no$
$Snd$	Type of buzzer sound (6 different voice types can be selected. Alarm during $D$ is chosen, the voice warning is canceled.) For Relay-8A is valid.	$0$	$6$		$0$
$d.inP$	Digital input types. $nd$ : Digital input unused. $ER$ : External alarm. $ER$ message flashes in the display. Output unchanged. $SR$ : Important external alarm. $SR$ message flashes in the display. Relay output is turned off. $HC$ :	$nd$	$LGht$		$nd$
$ddi$	Control type. $CLYP$ parameter is changed. (If $HE = Co$ , If $Co = HE$ ) $dF$ : Defrost operation is started.	0:00	99:00		0:00
$dPo$	Digital input delay. The period of the digital inputs to be active. Digital input polarity. $cL =$ While a digital input contact is closed, it is activated. $oP =$ While a digital input is opened, it is activated.	$cL$	$oP$		$cL$

### COMPRESSOR PROTECTION PARAMETERS

$CPon$	Delay time for the compressor after power is on.	0:00	99:00	min:sec	1:00
$CFoS$	Delay time required for the compressor to restart following a stop.	0:00	99:00	min:sec	1:00
$CPPn$	On time for the compressor output in the case of probe failure.	0:00	99:00	min:sec	0:00
$CPPF$	Off time for the compressor output in the case of probe failure	0:00	99:00	min:sec	1:00

### DEFROST CONTROL PARAMETERS

$dSnt$	Smart Defrost selection ( $no$ : Defrost counter (between 2 defrost duration) decrease irrespective of $d.inT$ status of the compressor. $YES$ : Defrost counter decreases as long as compressor work).	$no$	$YES$		$no$
$ddur$	Defrost duration ( If $ddur = 0$ selected, automatic and manual defrost is disabled ).	0:00	99:00	min:sec	1:00
$d.inT$	Time between 2 consecutive defrosts.	0:00	99:00	hr:min	1:00
$ddbP$	Display configuration in defrosting process ( $rE$ : Real temperature is displayed during defrost. ( $Lc$ : During a defrosting process, last measured temperature value is displayed before the defrosting process. This value remains constant until the end of defrosting.	$Lc$	$rE$		$Lc$
$ddrE$	Delay time for display real temperature after defrost is over.	0:00	99:00	min:sec	1:00
$dPon$	Defrost process with power. ( $no =$ Defrost process is not started when power-up. $YES =$ Defrost process starts when power-up ).	$no$	$YES$		$no$
$ddPo$	Delay time for defrosting after power-up.	0:00	99:00	min:sec	1:00

### ALARM CONTROL PARAMETERS

$RuPL$	Limit for upper alarm level. When $RtYP$ is changed, $RuPL$ should be readjusted.	$RLoL$	1500	°C	150
$RLoL$	Limit for lower alarm level. When $RtYP$ is changed, $RLoL$ should be readjusted.	-600	$RuPL$	°C	-60
$RHYS$	Hysteresis alarm	0.1	200	°C	2
$RtYP$	Alarm configuration. ( $RbS =$ Independent alarm. Alarm values are $RLoL$ and $RuPL$ .) ( $rEF =$ Relative alarm. Alarm values are $SEt - RLoL$ and $SEt + RuPL$ .) NOTE: Upper and Lower alarm level variables are determined according to the " $RtYP$ " parameter. If $RtYP = RbS$ , $RLoL$ and $RuPL$ . If $RtYP = rEF$ , $LcL = SEt - RLoL$ and $RuPL$ .	$RbS$	$rEF$		$RbS$
$RdFL$	Time delay to display alarm message after alarm is on.	0:00	99:00	min:sec	0:00
$RdPo$	Time delay to display alarm message after power is on.	0:00	99:00	hr:min	0:10

### MODBUS COMMUNICATION PARAMETERS

$RdRS$	Modbus slave device address for device	1	247		1
$bRud$	Modbus communication speed ( Baud rate, 0 : $oFF$ , 1 : 1200, 2 : 2400, 3 : 4800, 4 : 9600, 5 : 19200 )	$oFF$	1920	bps	9600

# ENDA EDT2411A DIGITAL THERMOSTAT MODBUS PROTOCOL ADDRESS MAP

## 1.1 HOLDING REGISTERS

Holding Register Addresses		Data Type	Data Content	Parameter Name	Read/Write Permission	Status Value
Decimal	Hex					
0000d	0x0000	word	Set value	--	Read / Write	-20
0001d	0x0001	word	Set point upper limit	<i>uPL</i>	Read / Write	150
0002d	0x0002	word	Upper level alarm	<i>R,uPL</i>	Read / Write	150
0003d	0x0003	word	Set point lower limit	<i>LoL</i>	Read / Write	-60
0004d	0x0004	word	Lower level alarm	<i>R,LoL</i>	Read / Write	-60
0005d	0x0005	word	The offset value for the cooling	<i>oFF</i>	Read / Write	0
0006d	0x0006	word	Cooling hysteresis	<i>HYS</i>	Read / Write	2
0007d	0x0007	word	Switch hysteresis for alarm	<i>R,HYS</i>	Read / Write	2
0008d	0x0008	word	Type of buzzer sound	<i>Snd</i>	Read / Write	0
0009d	0x0009	word	Digital input types .0= <i>nd</i> ;1= <i>ER</i> ;2= <i>LR</i> ;3= <i>HC</i> ;4= <i>DF</i>	<i>d.inP</i>	Read / Write	<i>nd</i>
0010d	0x000A	word	Digital input delay	<i>ddi</i>	Read / Write	0:00(0 sec)
0011d	0x000B	word	Delay time for the compressor after power is on.	<i>C.Pon</i>	Read / Write	1:00(60 sec)
0012d	0x000C	word	Delay time required for the compressor to restart following a stop.	<i>C.FoS</i>	Read / Write	0:00(0 sec)
0013d	0x000D	word	On time for the compressor output in the case of probe failure	<i>C.PPn</i>	Read / Write	0:00(0 sec)
0014d	0x000E	word	Off time for the compressor output in the case of probe failure	<i>C.PPF</i>	Read / Write	1:00(60 sec)
0015d	0x000F	word	Defrost duration	<i>d.dur</i>	Read / Write	1:00(60 sec)
0016d	0x0010	word	The time between 2 consecutive defrosts.	<i>d.int</i>	Read / Write	1:00(60 min)
0017d	0x0011	word	Delay time for defrosting after power is on.	<i>d.dPo</i>	Read / Write	1:00(60 sec)
0018d	0x0012	word	After the cooling process of cooling start-up delay	<i>d.drE</i>	Read / Write	1:00(60 sec)
0019d	0x0013	word	Time delay to display alarm message after alarm is on.	<i>R.dFL</i>	Read / Write	0:00(0 sec)
0020d	0x0014	word	Time delay to display alarm message after power is on.	<i>R.dPo</i>	Read / Write	0:10(10 min)

## 1.2 INPUT REGISTERS

Input Register Addresses		Data Type	Data Content	Parameter Name	Read/Write Permission
Decimal	Hex				
0000d	0x0000	word	Measured temperature value (°C / °F)	--	Read

\* Holding and Input Register parameters of type integer, those "signed integer" is defined as the decimal part of and associated with these parameters. (So, "14.0" is a parameter value of "140" will be read in). Relevant parameters for a period of "mm:ss" type ones in seconds, "hh:mm" while those species defined in minutes.

## 1.3 DISCRETE INPUTS

Discrete Input Addresses		Data Type	Data Content	Parameter Name	Read/Write Permission
Decimal	Hex				
0000d	0x0000	Bit	Control output status (0=OFF; 1=ON)	--	Read

## 1.4 COILS

Coil Addresses		Data Type	Data Content	Parameter Name	Read/Write Permission
Decimal	Hex				
00d	0x00	Bit	Control type selection. OFF = <i>Co</i> . ON = <i>HE</i>	<i>C.tYP</i>	Read / Write
01d	0x01	Bit	Temperature unit. OFF = <i>C</i> , ON = <i>F</i>	<i>Un it</i>	Read / Write
02d	0x02	Bit	Decimal point . OFF= <i>no</i> . ON= <i>YES</i>	<i>d.Pnt</i>	Read / Write
03d	0x03	Bit	Digital input polarity. OFF = <i>CL</i> . ON = <i>oP</i>	<i>dPo</i>	Read / Write
04d	0x04	Bit	Smart Defrost selection. OFF = <i>no</i> , ON= <i>YES</i>	<i>d.snt</i>	Read / Write
05d	0x05	Bit	Display configuration during defrost. OFF = <i>Lc</i> , ON = <i>rE</i>	<i>d.dSP</i>	Read / Write
06d	0x06	Bit	Defrost process is started by power-up. OFF = <i>no</i> , ON = <i>YES</i>	<i>d.Pon</i>	Read / Write
07d	0x07	Bit	Alarm configuration. OFF = <i>RbS</i> , ON = Relative alarm <i>rEF</i>	<i>R.tYP</i>	Read / Write