


TERMS

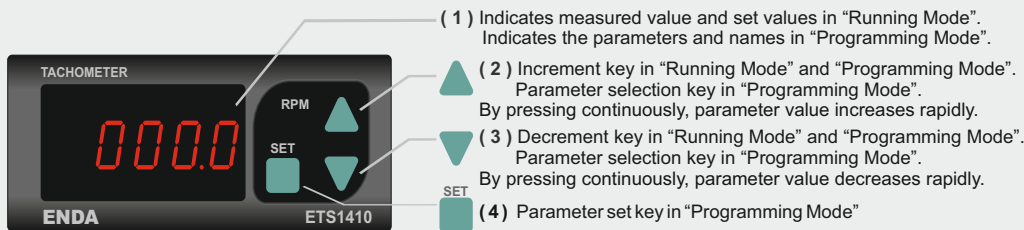

(1) PV Göstergesi	7 Segment, 4 Digits Red LED display
Character Heights	12,5 mm
(2),(3),(4) Keypad	Micro switch

SETTING UP THE PARAMETERS

By pressing ▲▼ keys together for 2 seconds, "Programming Mode" is entered.

During a selected parameter, by pressing SET key, parameter value can be displayed. Parameter value can be changed with ▲▼ keys. If no operation performed for 3 seconds or during this time, if SET key is pressed while the parameter value displayed, parameter name will be displayed again. While parameter name displayed, if by pressing together ▲▼ keys, "Running Mode" is entered.

▲ Provides to access to the next parameter in "Programming Mode". Increases the selected parameter value. By pressing continuously, parameter value increases rapidly.

▼ Provides to access to the previous parameter in "Programming Mode". Decreases the selected parameter value. By pressing continuously, parameter value decreases rapidly.

VIEWING THE REVISION DATE

If SET ▲▼ keys are pressed together, the revision date is displayed consecutively in days, months and years. If any of the pressed buttons are released while the revision date is displayed, the measurement value is displayed again.

DEVICE PARAMETERS

Parameter Name	Description	Min.	Max.	Unit	Default Value
<i>c</i>	Dividing parameter value	1	999		1
<i>dP</i>	Decimal place parameter	0	3		0

MODBUS PARAMETERS

Parameter Adr.	Description	Min.	Max.	Unit	Default Value
<i>bAud</i>	Modbus Baudrate. 0 : OFF, 1 : 1200 , 2 : 2400 , 3 : 4800 , 4 : 9600 , 5 : 19200)	OFF	1920	Bps	9600
<i>Rdr5</i>	Modbus, slave device address.	1	247		1

EXAMPLES FOR USING DIVISOR PARAMETER

ENDAETS1410 Pulse Input Tachometer divides the pulses from the input to the display by dividing it with the calibration value. The divisor value can be selected between 1 and 999. This feature allows the device to be used in precise speed measurements, instantaneous flow measurements and speed measurement applications. According to this, 1 as the divisor value must be entered for the one-to-one flow rate measurement. Calculation of dividing information can be formulated as follows :

$$\text{CAL(divider value)} = \frac{\text{Number of pulses per minute}}{\text{Desired value on the display}}$$

DIVISOR VALUE FOR LINE SPEED MEASUREMENT

25cm circumference of cylinder has 3 rpm turn. Speed of the belt passing over this cylinder will be measured in meter/min. To measure the rotation of the cylinder, 50 pulse/cycle encoder will be used.

The dividing value is calculated as follows ;

Display value : 3cycles/min X 25cm/rpm = 75cm/min

Number of pulses per minute : 3cycles/minute X 50pulses/rpm = 150 pulses/minute

Then ;

$$\text{CAL(divider value)} = \frac{150 \text{ pulse/minute}}{75 \text{ cm/minute}} = 2$$

ERROR MESSAGES

F.r.L.o Input frequency too low or no signal

F.r.H.i High input frequency

--- Measured value is higher than 9999

ENDA ETS1410 TACHOMETER MODBUS PROTOCOL ADDRESS MAP

1. HOLDING REGISTERS

Holding Register Addresses	Data Type	Parameter Description	Parameter Name	Read / Write Permission	
					Decimal
0000d	0x0000	word	ModBus device address (Can be adjusted between 1 and 247)	<i>Rdr5</i>	R / W
0001d	0x0001	word	Modbus communication speed (Baudrate) (0 = Modbus cancel, 1 = 2400 bps, 2 = 4800 bps, 3 = 9600 bps, 4 = 19200 bps, 5 = 38400 bps)	<i>bAud</i>	R / W
0002d	0x0002	word	Decimal place parameter	<i>dP</i>	R / W
0003d	0x0003	word	Divider parameter	<i>c</i>	R / W

1. INPUT REGISTERS

Input Register Addresses	Data Type	Parameter Description	Parameter Name	Read / Write Permission	
					Decimal
0000d	0x0000	word	Measured frequency	--	R