



Please read this document carefully before using this product. The guarantee will be invalidated if the device is damaged by not following instructions detailed in the manual. The company shall not be responsible for any damage or losses however caused, which may be experienced as a result of the installation or use of this product.

## ENDA EU4430 PID UNIVERSAL CONTROLLER

Thank you for choosing ENDA EU4430 Universal Controller Devices.

- ▶ 48x48mm sized.
- ▶ Dual setpoint value can be selected.
- ▶ PT100 ,J, K, L, T, S, R sensor (thermocouple) types can be selected.
- ▶ 0-20mA, 4-20mA, 0-10V, 2-10V, 0-25mV and 0-50mV input selections.
- ▶ Auto calculation for PID parameters (SELF TUNE).

### Self tune for automatic PID calculation or manually enter PID parameters if known.

- ▶ Three different feature can be assigned to digital input.
- ▶ Three different feature can be assigned to F function key.
- ▶ Soft-Start feature.
- ▶ Analogue, SSR or Relay Output Control selection.
- ▶ 0-20mA and 4-20mA Analogue Output Control selection.
- ▶ A1 Relay output programmable as primary Alarm or PID Cooling Control output.
- ▶ C/A2 Relay output can be used as secondary Alarm or Temperature Control output.
- ▶ Heating/Cooling control selection.
- ▶ Zero point input shift.
- ▶ In case of sensor failure, periodically, auto-periodically running or relay state can be selected.
- ▶ RS485 Modbus RTU communication protocol feature (Specify at order).
- ▶ CE marked according to European Norms.



RoHS  
Compliant



Order Code : EU4430 -  -

| 1  | 2   |
|--|---|
| 1 - Supply Voltage<br>230VAC...90 - 250V AC<br>24VAC...24V AC<br>SM.....9-30V DC /<br>7-24V AC | 2 - Modbus (Optional)<br>RS..... RS-485 Modbus Available<br>(Optional / Specify at order).<br>Blank.... N/A<br><b>⚠ Please see EU4430 Modbus Address<br/>Map and Connection Diagram Guide for<br/>Modbus feature.</b> |

| Input Type                            | Scale Range                            | Accuracy          |                                   |
|---------------------------------------|--|-------------------|-----------------------------------|
| PT100 Resistance Thermometer EN 60751 | -199.9...600.0 °C                      | -199.9...999.9 °F | ± 0,2% (for full scale) ± 1 digit |
| PT100 Resistance Thermometer EN 60751 | -200...600 °C                          | -328....1112 °F   | ± 0,2% (for full scale) ± 1 digit |
| J (Fe-CuNi) Thermocouple EN 60584     | -30.0....600.0 °C                      | -22.0....999.9 °F | ± 0,5% (for full scale) ± 1 digit |
| J (Fe-CuNi) Thermocouple EN 60584     | -30....600°C                           | -22....1112 °F    | ± 0,5% (for full scale) ± 1 digit |
| K (NiCr-Ni) Thermocouple EN 60584     | -30.0....999.9°C                       | -22.0....999.9 °F | ± 0,5% (for full scale) ± 1 digit |
| K (NiCr-Ni) Thermocouple EN 60584     | -30....1300°C                          | -22....2372 °F    | ± 0,5% (for full scale) ± 1 digit |
| L (Fe-CuNi) Thermocouple DIN 43710    | -30.0....600.0°C                       | -22.0....999.9 °F | ± 0,5% (for full scale) ± 1 digit |
| L (Fe-CuNi) Thermocouple DIN 43710    | -30....600°C                           | -22....1112 °F    | ± 0,5% (for full scale) ± 1 digit |
| T (Cu-CuNi) Thermocouple EN 60584     | -30.0....400.0°C                       | -22.0....752.0 °F | ± 0,5% (for full scale) ± 1 digit |
| T (Cu-CuNi) Thermocouple EN 60584     | -30....400°C                           | -22....752 °F     | ± 0,5% (for full scale) ± 1 digit |
| S (Pt10Rh-Pt) Thermocouple EN 60584   | -40...1700°C                           | -40....3092 °F    | ± 0,5% (for full scale) ± 1 digit |
| R (Pt13Rh-Pt) Thermocouple EN 60584   | -40...1700°C                           | -40....3092 °F    | ± 0,5% (for full scale) ± 1 digit |
| 0-20mA input                          | -1999...+9999 (max. scale range 10000) |                   | ± 0,2% (for full scale) ± 1 digit |
| 4-20mA input                          | -1999...+9999 (max. scale range 10000) |                   | ± 0,2% (for full scale) ± 1 digit |
| 0-10V input                           | -1999...+9999 (max. scale range 10000) |                   | ± 0,2% (for full scale) ± 1 digit |
| 2-10V input                           | -1999...+9999 (max. scale range 10000) |                   | ± 0,2% (for full scale) ± 1 digit |
| 0-25mV input                          | -1999...+9999 (max. scale range 10000) |                   | ± 0,2% (for full scale) ± 1 digit |
| 0-50mV input                          | -1999...+9999 (max. scale range 10000) |                   | ± 0,2% (for full scale) ± 1 digit |

### ENVIRONMENTAL CONDITIONS

|                             |   |
|-----------------------------|---|
| Ambient/storage temperature | 0 ... +50°C/-25 ... +70°C   |
| Max. Relative humidity      | Relative humidity 80% for temperatures up to 31°C decreasing linearly to 50% relative humidity at 40°C. |
| Rated pollution degree      | According to EN 60529; Front panel : IP65, Rear panel : IP20  |
| Height                      | Max. 2000m  |

**⚠ KEEP AWAY device from exposed to corrosive, volatile and flammable gases or liquids and DO NOT USE the device in similar hazardous locations.**

### ELECTRICAL CHARACTERISTICS

|                     |  |
|---------------------|--|
| Supply              | 90-250V AC 50/60Hz, 24V AC ±%10 50/60Hz or 9-30VDC / 7-24VAC ±%10 SMPS   |
| Power consumption   | Max. 5VA   |
| Wiring              | Power screw-terminal connections: 2.5mm <sup>2</sup> , Signal screw-terminal connections: 1,5mm <sup>2</sup> . |
| Line resistance     | Max. 100 Ohm   |
| Data retention      | EEPROM (minimum 10 years)  |
| EMC                 | EN 61326-1: 2013 (Performance criterion B satisfied for EN 61000-4-3 standard).                                |
| Safety requirements | EN 61010-1: 2010 (Pollution degree 2, overvoltage category II)   |

### OUTPUTS

|                           |  |
|---------------------------|--|
| C/A2 Output               | Relay : 250V AC, 10A (for resistive load), NO+NC (Control or Alarm2 Output selection).             |
| A1 Output                 | Relay : 250V AC, 5A (for resistive load), NO (Alarm1 and Cooling Control Output selection).        |
| ANL/SSR Output            | Max. SSR Output ; 0-20mA, 4-20mA, 24V 20mA. Max. load resistance ; 600 Ohm (12 bit 0.2% accuracy). |
| Life expectancy for relay | Without load 30.000.000 switching; 250V AC, 8A (resistive load) 300.000 switching.                 |

### CONTROL

|                   |  |
|-------------------|--|
| Control type      | Single Setpoint and Alarm Control.   |
| Control algorithm | On-Off / P, PI, PD, PID (selection).   |
| A/D converter     | 14 bit.  |
| Sampling time     | Min. 100ms.  |
| Proportional band | Can be adjusted between %0.0 and %100.0 . If Pb=%0.0 , ON-OFF control is selected. |
| Control period    | Can be adjusted between 1 and 125secs.   |
| Hysteresis        | Can be adjusted between 1 and 50°C/F.  |
| Output power      | Setpoint value ratio can be adjusted between %0 and %100 .                         |

### HOUSING

|                    |  |
|--------------------|--|
| Housing type       | Suitable for flush-panel mounting according to DIN 43 700. |
| Dimensions         | W48xH48xD87mm  |
| Weight             | Approx. 250g   |
| Enclosure material | Self extinguishing plastics                                |


**⚠ Avoid any liquid contact when the device is switched on. DO NOT clean the device with solvent (thinner, gasoline, acid etc.) and / or abrasive cleaning agents.**



SISEL MÜHENDİSLİK ELEKTRONİK SAN. VE TİC. A.Ş.  
Sarıfili Mah. Barbaros Cad. No:18 Y.Dudullu 34775  
ÜMRANİYE/İSTANBUL-TÜRKİYE  
Tel : +90 216 499 46 64 Pbx. Fax : +90 216 365 74 01  
url : www.enda.com.tr








# DIMENSIONS

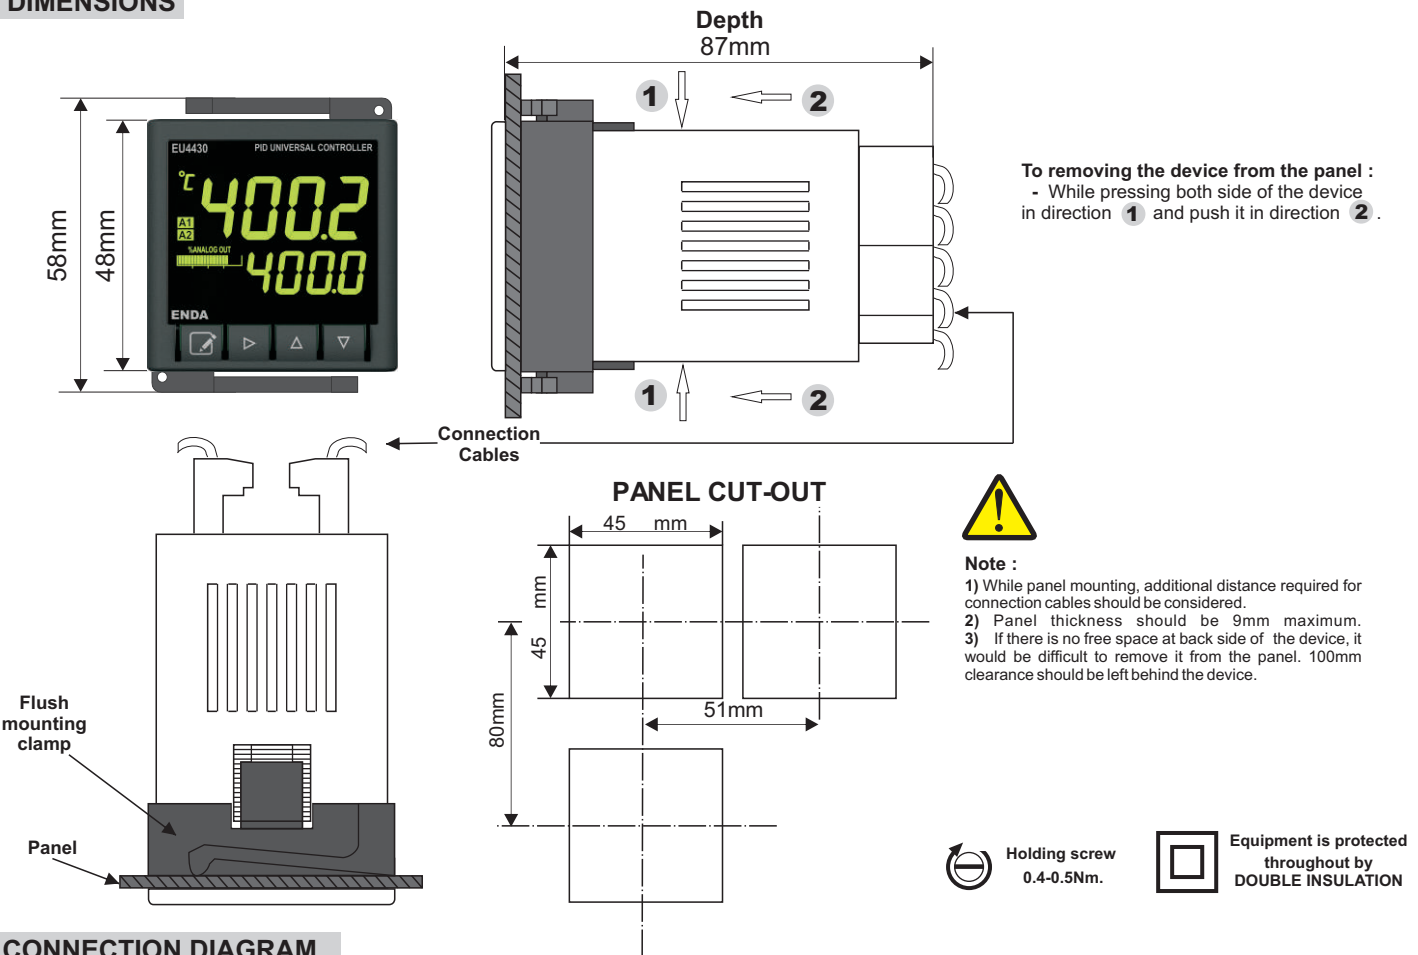


# CONNECTION DIAGRAM


**ENDA EU4430** PID Temperature Controllers are intended for installation in control panels. Make sure that the device is used only for intended purpose. The shielding must be grounded on the instrument side. During an installation, all of the cables that are connected to the device must be free of energy. The device must be protected against inadmissible humidity, vibrations, severe soiling. Make sure that the operation temperature is not exceeded. All input and output lines that are not connected to the supply network must be laid out as shielded and twisted cables. These cables should not be close to the power cables or components. The installation and electrical connections must be carried on by a qualified staff and must be according to the relevant locally applicable regulations

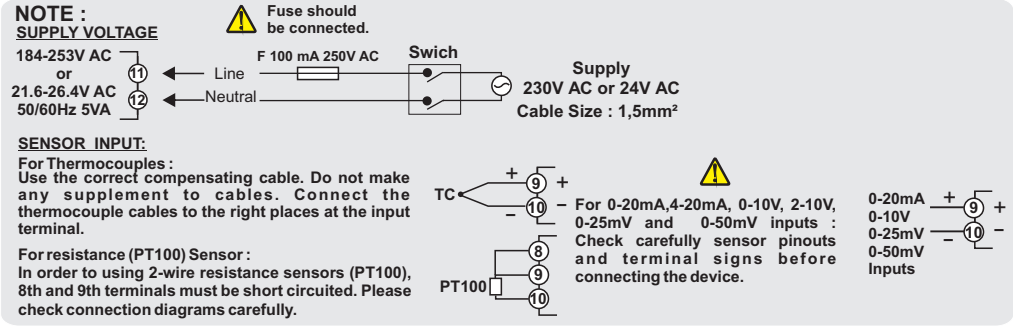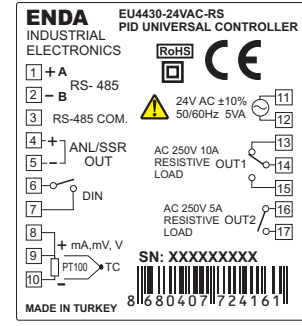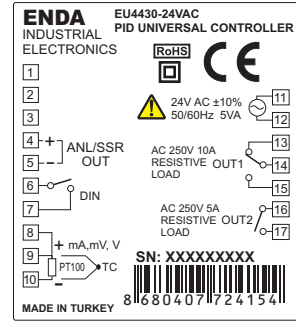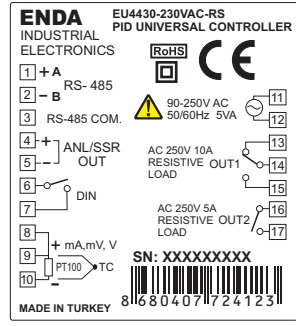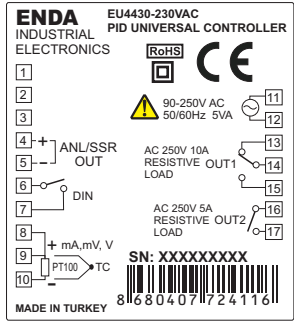

**Logic output of the instrument is not electrically insulated from the internal circuits. Therefore, when using a grounding thermocouple, do not connect the logic output terminals to the ground.**

**Note :**  
1) Mains supply cords shall meet the requirements of IEC 60227 or IEC 60245.  
2) In accordance with the safety regulations, the power supply switch shall bring the identification of the relevant instrument and it should be easily accessible by the operator.

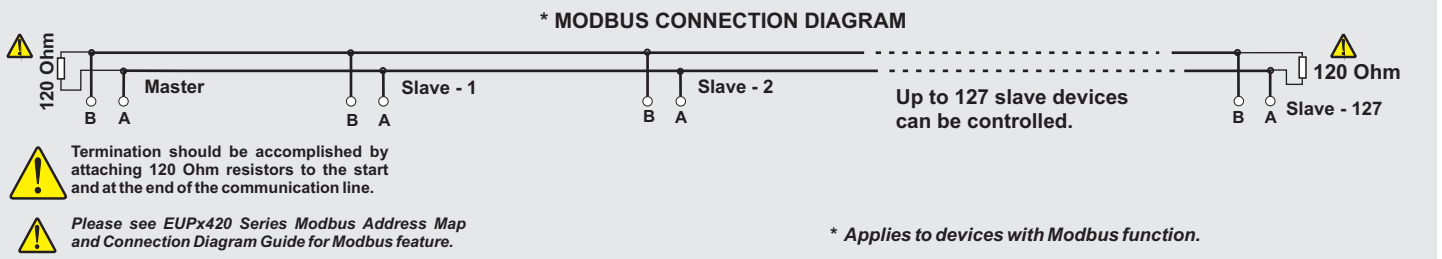

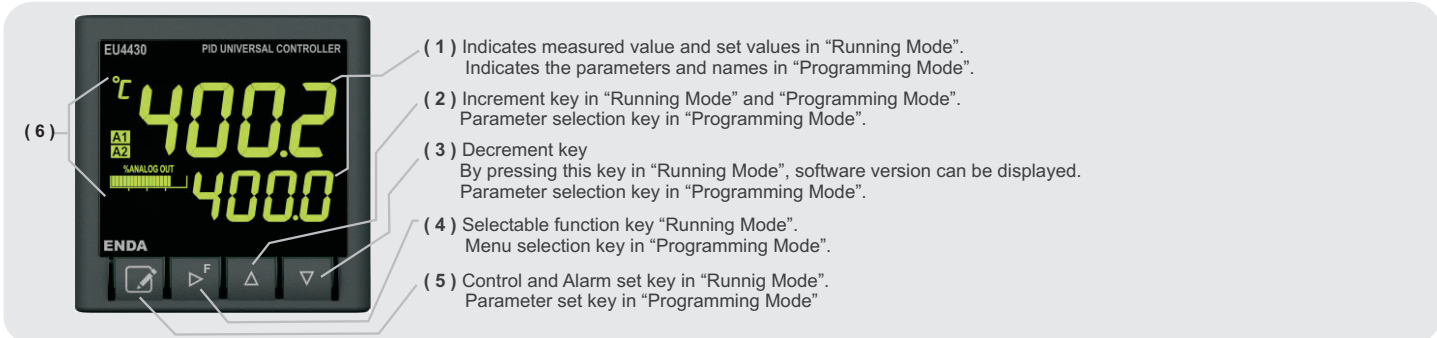

|                          |  |
|--------------------------|--|
| (1) PV and SV Indicators | PV 7 Segment 4 digits green LED , SV 7 Segment 4 digits green LED display.       |
| Character Height         | PV Display 12.0mm , SV Display 8.13mm  |
| (2),(3),(4),(5) Keypads  | Micro switch   |
| (6) Status Indicators    | Control, Alarm1, Alarm2, Analog output, SSR output and status indicator symbols. |

ALARM1 AND ALARM2 OUTPUT TYPES

**Independent Alarm**  
 $R\ i\ t\ P = i\ n\ d\ E$

(ASV min. = beginning of scale  
ASV max. = end of scale)  
SV = CONT output set value

**Deviation Alarm**  
 $R\ i\ t\ P = d\ E$

(ASV min. = -300, ASV maks. = +300)  
ASV = Alarm output set value

**Band Alarm**  
 $R\ i\ t\ P = b\ A\ n\ d$

SV = CONT output set value ASV = AL1 output set value  
(ASV min. = 0, ASV max. = +300)

**Band Alarm With Inhibition**  
 $R\ i\ t\ P = b\ A\ n\ i$

SV = Set point of CONT output ASV = Set point of AL1 output (ASV min. = 0, ASV max. = 300)

SETTING UP ALARM CONTROL AND SETPOINT VALUES

3 seconds later

Tuşuna basılırsa kontrol ve alarm set değerleri ayar konumuna geçilir.

**ERROR MESSAGES**

**PFR** No communication with sensor. (Sensor and/or cable broken or not connected)

**400** Temperature value is higher than scale.

**-400** Temperature value is lower than scale.

If one of the  $d\ i\ n\ c.$  or  $F\ F\ E\ c.$  parameters are set to the  $C\ 2\ 5\ R$  value, this parameter can be displayed.

If the  $C\ a\ 5\ E$  parameter is set to SSR out, this parameter can be displayed.


If one of the  $d\ i\ n\ c.$  or  $F\ F\ E\ c.$  parameters are set to the  $\bar{a}\ R\ n\ u.$  and if  $C\ P\ b$  is different from 0, this parameter can be displayed.

ENTERING TO PROGRAMMING MODE

If key is pressed while holding key, the "Programming Mode" is entered.

RUNNING MODE

During in "Programming Mode", if no key is pressed for 20 sec, settings automatically saved and device returns to the "Running Mode" (to the home screen). Alternatively, by pressing key "Running Mode" is entered and by pressing both keys at once, settings automatically saved and device returns to the "Running Mode" (to the home screen).

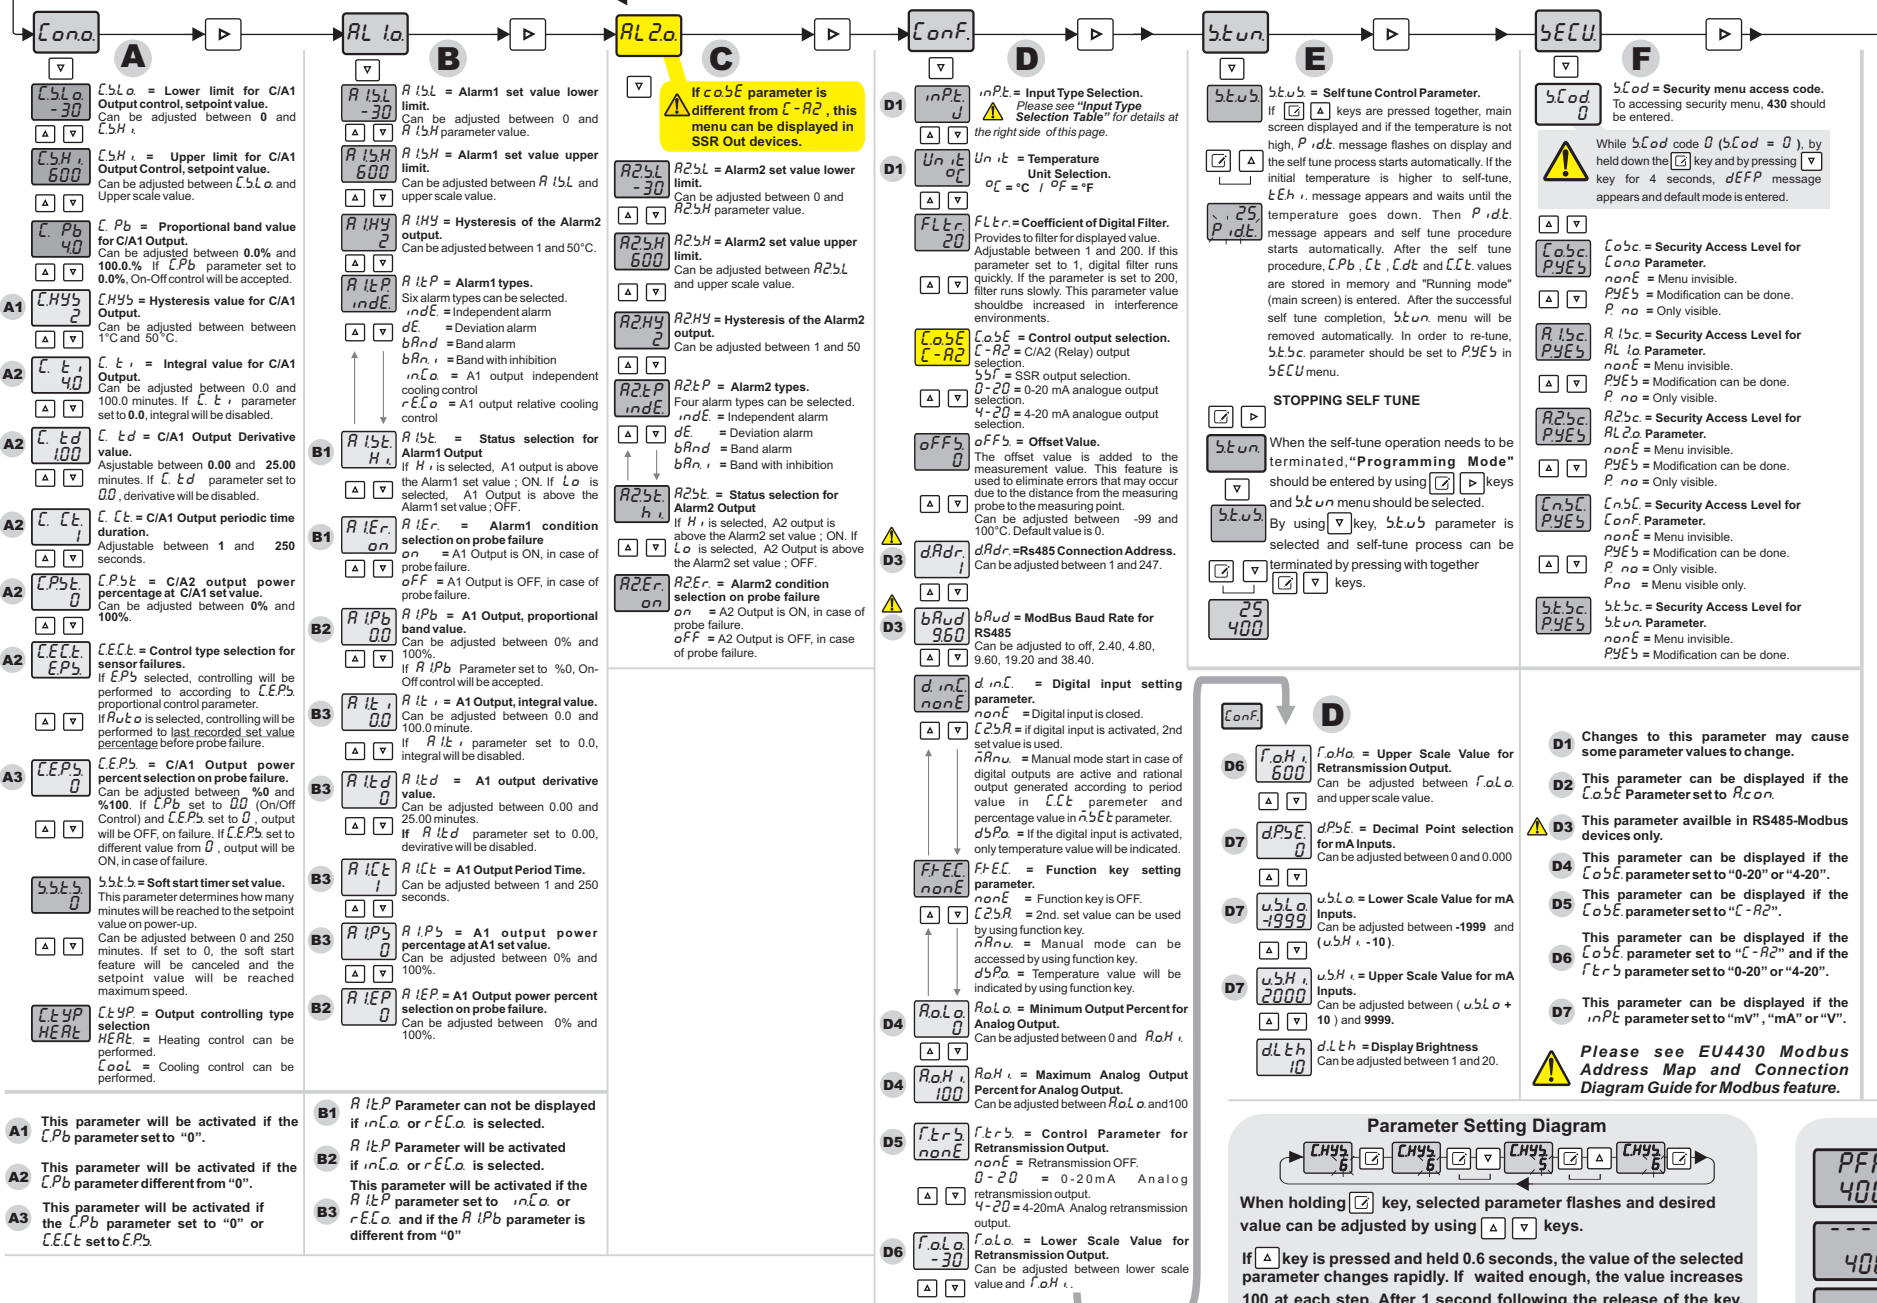

ANNOTATIONS

Information tracking method as follows.



On the device screens shown on this page; - First line indicates the parameter name, - Second line indicates the current parameter's value. At the same time, the value shown in the second line is the default value of the device.

Parameter name.  
 Parameter value (default value).

Input Type Selection Chart

*inPt* = Input Type selection.

|            |                      |
|------------|----------------------|
| <i>PtD</i> | = PT100 - Decimal,   |
| <i>Pt</i>  | = PT100 Non-decimal, |
| <i>uD</i>  | = J Type - Decimal,  |
| <i>u</i>   | = J Non-decimal,     |
| <i>t</i>   | = K Type - Decimal,  |
| <i>lD</i>  | = L Type - Decimal,  |
| <i>l</i>   | = L Non-decimal,     |
| <i>tD</i>  | = T Type - Decimal,  |
| <i>t</i>   | = T Type,            |
| <i>s</i>   | = S Type,            |
| <i>r</i>   | = R Type             |

0-20 = 0-20 mA input,  
4-20 = 4-20 mA input,  
0-10 = 0-10 V input,  
2-10 = 2-10 V input,  
0-25 = 0-25 mV input,  
0-50 = 0-50 mV input.

Changes to this parameter may cause some parameter values to change.

ERROR MESSAGES

|  |   |
|--|---|
|  | No communication with sensor. (Sensor and/or cable broken or not connected) |
|  | Temperature value is higher than scale.                                     |
|  | Temperature value is lower than scale.                                      |

Parameter Setting Diagram

